


## SEWAGE TREATMENT PLANT – NEW CONSTRUCTION

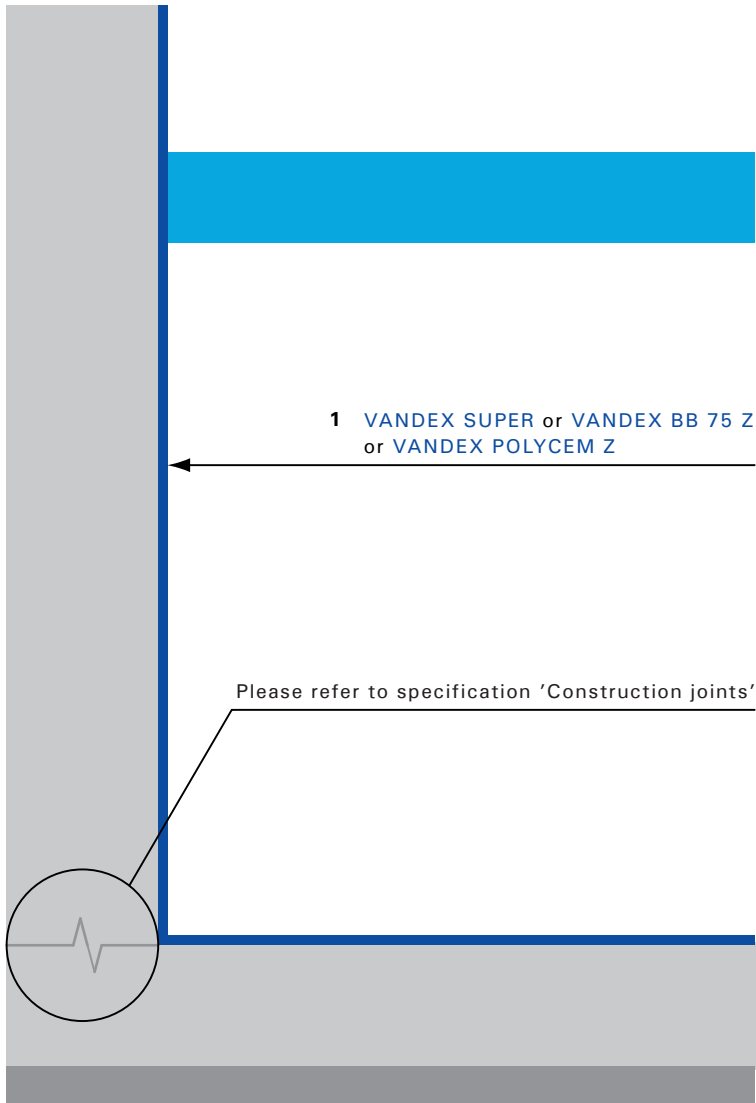

### Application Instructions

- 1 Apply two coats of VANDEX SUPER or alternatively two coats of VANDEX BB 75 Z or VANDEX POLYCEM Z where a particularly smooth surface is required.

### Remarks:

- The selection of the most appropriate water-proofing lining will depend on the type and aggressiveness of liquid stored and the anticipated abrasion stress.
- Substrate adhesion strength > 1.5 N/mm<sup>2</sup>

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.